





Data Sheet 3- Phase-Power Meter

PCE-830 series

PCE Americas Inc.
711 Commerce Way
Suite 8
Jupiter
FL-33458
USA
From outside US: +1
Tel: (561) 320-9162
Fax: (561) 320-9176
info@pce-americas.cor

PCE Instruments UK Ltd.
Units 12/13
Southpoint Business Park
Ensign way
Hampshire / Southampton
United Kingdom, SO31 4RF
From outside UK: +44
Tel: (0) 2380 98703 0
Fax: (0) 2380 98703 o
info@pce-instruments.com

FN

www.pce-instruments.com/english www.pce-instruments.com



3 phases, measures power and analyses harmonics, with memory, interface and sofware

The PCE-830 power and harmonics analyser is used for measuring one to three phases of electrical quantities for alternating current (AC). This power and harmonics analyser also measures such parameters as voltage, current, frequency, harmonics and power as well as indicting, according to standard EN50160, harmonic values, interharmonics and asymmetrics. Interferences, such as interruptions, leaks, overloads or transience (from 16µs), are detected with their corresponding values. The backlit LCD, with high resolution, can show up to 35 parameters simultaneously. It can have up to 3 clips attached at the same time. In the data logger mode, it can save up to 17,470 readings (3 phases / 4 conductors) and in a simpler set-up (1 fase / 2 conductores) it can save up to 52,400 readings, split into 85 groups. All this makes the PCE-830 power analyser the ideal instrument for taking measurements over long periods of time. Measurement values obtained can be sent to a computer and be processed with the analysis siftware which comes included. The device comes with everything needed to measure and analyse from the moment the device arrives.

- Analysis of a network of 3 phases/4 conductors, 3 phases/3 conductors, 1 phase/2 conductors, 1 phase/3 conductors
- Measures effective real value (V 123 and I 123)
- Measures active power (W, KW, MW, GW)
- Measures apparent and reactive power (KVA, KVAR)
- Power Factor (PF), phase angle (Φ)
- Measures energy and work (Wh, KWh, KVARh, PFh)
- Measures current from 0.1mA to 3000A, allowing for the reserve power of a factory to be determined
- Large LCD that shows up to 35 parameters simultaneously (3P4W [=3 phases/4 conductors])
- CT conditions (1 to 600) and PT (1 to 3000) are programmable
- Indicates current wave forms and voltage overlap
- 512KB of memory with programmable intervals to save data every 2 to 3000 seconds, 17,470 readings using the system of 3 phases / 4 conductors)
- Indicates wave forms, efficiency parameters and harmonic distortion
- Backlit LCD wth dot matrix
- Average power (AD in W, KW, MW)
- Maximum power (MD in W, KW, MW) with the programmable period
- Analysis of harmonic distortion up to a curvature of 99
- Indication of up to 50° form of harmonic wave
- Indication of the wave form with maximum value (1024 readings / period)
- Analysis of absolute distortion (%THD-F)
- Diagram of graphic equilibrium with parameters of a 3 phase system
- Detects up to 28 transistors (time and cycles) with a programmable threshold (%)
- Relation of 3 phases of voltage or asymmetrical current (VUR)
- Factor of 3 phases of voltage and asymmetrical current (d0%, d2%)
- USB port (optically insulated)
- Integrated timer and calendar to record data
- Maximum diameter of the electrical conductor for the amp clamp: the PCE-6801 ~30mm, PCE-6802 ~55mm, PCE-3007 ~170mm

DATA SHEET

Technical specifications

Measurement values Measurement ranges / resolution / accuracy

PCE-830 + PCE-6801 5.0 to 999.9W / 0.1W / ±1% ±0.8W

1,000 to 9,999kW / 0.001kW / ±1% ±8W Watts AC (50 or 60Hz, PF 0.5 up to 1) 10.00 to 99.99kW / 0.01kW / ±1% ±80W 100.0 to 999.9kW / 0.1kW / ±1% ±0.8kW

1,000 to 9,999kW / 1kW / ±1% ±8kW

PCE-830 + PCE-6802 5.0 to 999.9W / 0.1W / ±1% ±0.8W

Watts AC (50 or 60Hz, PF 0.5 up to 1) 1,000 to 9.999kW / 0.001kW / ±1% ±8W 10.00 to 99.99kW / 0.01kW / ±1% ±80W 100.0 to 999.9kW / 0.1kW / ±1% ±0.8kW

1,000 to 9,999kW / 1kW / ±1% ±8kW 0.000 to 9.999MW / 0.001MW / ±1% ±80kW

10.0 to 999.9W / 0.1W / ±1% of measurement

Watts AC (50 or 60Hz, PF 0.5 up to 1) range

1,000 to 9.999kW / 0.001kW / ±1% of

measurement range 10.00 to 99.99kW / 0.01kW / ±1% of

measurement range

100.0 to 999.9kW / 0.1kW / ±1% of

measurement range

0.04A to $1A / 0.001A / \pm 0.5\% \pm 0.05A$

1,000 to 9,999kW / 1kW / ±1% of measurement

range

PCE-830 + PCE-6801

PCE-830 + PCE-3007

Current AC (50 or 60Hz, auto range select, 0.4A to 10.0A / 0.01A / ±0.5% ±0.05A

4A to 100.0A / 0.1A / ±1.0% ±0.5A TRMS)

PCE-830 + PCE-6802

10.00A / 0.01A / Current AC (50 or 60Hz, auto range select, 4A to 100.0A / 0.01A / ±0.5% ±0.5A

40A to 1000.0A / 0.1A / ±0.5% ±5A TRMS)

PCE-830 + PCE-3007 0 to 300A / 0.1A / ±1.0% of measurement range Current AC (50 or 60Hz, auto range select, 300.0 to 999.9A / 0.1A / ±1.0% of measurement

TRMS) range

1,000 to 3,000A / 1A / ±1.0% of measurement range

 $20.0 \dots 500.0 \text{ V} / 0,1 \text{ V} / \pm 0,5 \% \pm 5 \text{ digits}$ Voltage AC (50 or 60Hz, TRMS)

(grounded)

20.0 ... 600.0 V / 0,1 V / ±0,5 % ±5 digits

(phase to phase)

Harmonic distortion of AC voltage 1 to 20° / 0.1% / ±1.0%

> 21 to 49° / 0.1% / 4% of reading ±2.0% 50 to 99° / 0.1% / 6% of reading ±2.0%

PCE-830 + PCE-6801 1 to 20° / 0.1% / ±0.2% of reading ±1.0% Harmonics of AC current in % 11 to 20° / 0.1% / ±2% of reading ±1.0%

21 to 50° (A)/ 0.1% / ±5% of reading ±1.0% 21 to 50° (mA)/ 0.1% / ±10% of reading ±1.0% 51 to 99° / 0.1% / ±35% of reading ±1.0%

PCE-830 + PCE-6802 1 to 10° / 0.1% / ±2%

Harmonics of AC current in % 21 to 49° / 0.1% / 4% of reading ±2.0% 50 to 99° / 0.1% / 6% of reading ±2.0%

DATA SHEET



 $\begin{array}{lll} \mbox{PCE-830 + PCE-3007} & 1 \mbox{ to } 10^{\circ} \ / \ 0.1\% \ / \ \pm 2\% \\ \mbox{Harmonics of AC current in } \% & 21 \mbox{ to } 49^{\circ} \ / \ 0.1\% \ / \ \pm 6\% \\ \end{array}$

50 to 99° / 0.1% / ±10%

PCE-830 + PCE6801 / PCE-830 + PCE-6802

Power Factor (PF)

0.00 to 1.00 / 0.01 / ±0.04

PCE-830 + PCE3007

0.000 to 1,000 / 0.001 / ±0.04

Power Factor (PF)

PCE-830 + PCE6801 / PCE-830 + PCE-6802

Phase angle (Phi)

-180° to 180° / 0.1° / ±1°

PCE-830 + PCE3007

Phase angle (Phi)

 0° to 180° / 0.1° / $\pm 2^{\circ}$

PCE-830 + PCE-6801 0.0 to 20.0% / 0.1% / ±1%

Total harmonic distortion 20.0 to 100% / 0.1% / ±3% of reading ±5% 100 to 999.9% / 0.1% / ±10% of reading ±10%

PCE-830 + PCE-6802 0.0 to 20.0% / 0.1% / ±2%

Total harmonic distortion 20.0 to 100% / 0.1% / ±6% of reading ±1%

100 to 999.9% / 0.1% / ±10% of reading ±1%

PCE-830 + PCE-3007 0.0 to 20.0% / 0.1% / ±2%

Total harmonic distortion 20.0 to $100\% / 0.1\% / \pm 6\%$ of reading $\pm 1\%$

100 to 999.9% / 0.1% / ±10% of reading ±1%

Maximum measurement of AC voltage and

current

 $50Hz / 19\mu S / \pm 5\% \pm 30$ digits $60Hz / 16\mu S / \pm 5\% \pm 30$ digits

Peak value measurement of AC voltage and

current

1.00 to 99.99 / 0.01 / ±5% ±30 digits

Frequency range in automatic mode 45 to 65Hz / 0.1Hz / 0.1Hz

Memory 512kB for a maximum 52,420 readings taken by

1 phase / 2 conductors

Port USB

Software and cable included, for Windows 2000, XP, ME

Display backlit LCD with dot matrix

Power 8 AA batteries(Mignon)

Dimensions 257 x 155 x 57mm

Weight 1,160g

Operating conditions max. 85% relative humidity / -10 to 50°C

Type of protection / standards IEC 61010, 600 V/CAT III





Set 1: PCE-830 + PCE-6801 amp clamp (100A)

- Electrical conductor pick-up: 30mm diameter

- Range selection: manual (1A, 10A, 100A)

- Dimensions: 210 x 62 x 36mm

- Weight: 200g



Set 2: PCE-830 + PCE-6802 amp clamp (1000A)

- Electrical conductor pick-up: 55mm diameter

- Range selection: manual (10A, 100A, 1,000A)

- Dimensions: 244 x 97 x 46mm

- Weight: 600g



Set 3: PCE-830 + PCE-3007 flexible amp clamp (3000A)

- Electrical conductor pick-up: 170mm diameter

- Minimum radial curve : 35mm

- Length of electrical conductor: 610mm

- Diameter of electrical conductor: 14mm

- Dimensions (Box): 130 x 80 x 43mm

 
- Weight: 410g

Outline of the PCE-830





Connecting the amp clamps to the PCE-830:

- 1. Turn on the device.
- 2. Push the "1f3f" key until "3P3W" appears on the display for 3 phases / 3 conductors.
- 3. Connect the 3 test cables from the voltage with
 - L1, L2, L3 and the analyser. The amp clamps are connected, as seen in the image to the right, between the device and the circuit.
- 4. The results can then be seen on the display.




Examples of software and of the PCE-830 analyser

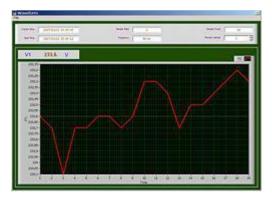

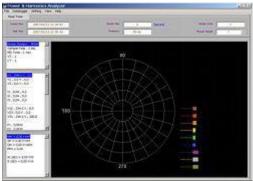



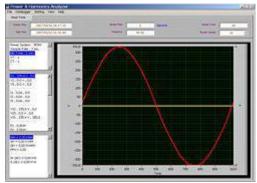

DATA SHEET



Contents

PCE-830 power analyser, 3 amp clamps - depending on the set ordered (PCE-6801, PCE-6802 or PCE-3007), 4 alligator clips, 4 safety test lines (3m long), 8 batteries, mains adaptor, carrying case, USB cablem software and user's manual

